


TRI-NEX 07.0mm Tapered Implants - Drill Sequence

Tapered (IA43-12d Co-Axis)


Soft Bone



Medium Bone

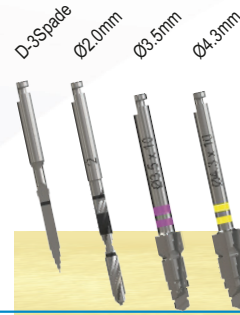

Dense Bone

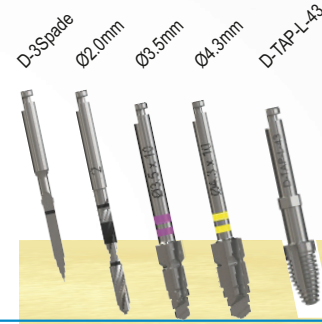

NOTE: Site preparation Sequence recommended by Southern Implants does not replace the judgement and experience of the surgeon.
(illustration is for 10mm implants.)



SOUTHERNIMPLANTS

Innovative Treatment Solutions

www.southernimplants.com